
Datalogic™ JavaPOS Device Services



Quick Reference Guide

Datalogic ADC, Inc.

959 Terry Street

Eugene, Oregon 97402

USA

Telephone: (541) 683-5700

Fax: (541) 345-7140

An Unpublished Work - All rights reserved. No part of the contents of this documentation or the procedures described therein may be reproduced or transmitted in any form or by any means without prior written permission of Datalogic ADC, Inc. or its subsidiaries or affiliates ("Datalogic" or "Datalogic ADC"). Owners of Datalogic products are hereby granted a non-exclusive, revocable license to reproduce and transmit this documentation for the purchaser's own internal business purposes. Purchaser shall not remove or alter any proprietary notices, including copyright notices, contained in this documentation and shall ensure that all notices appear on any reproductions of the documentation.

Should future revisions of this manual be published, you can acquire printed versions by contacting your Datalogic representative. Electronic versions may either be downloadable from the Datalogic website (www.datalogic.com) or provided on appropriate media. If you visit our website and would like to make comments or suggestions about this or other Datalogic publications, please let us know via the "Contact Datalogic" page.

Disclaimer

Datalogic has taken reasonable measures to provide information in this manual that is complete and accurate, however, Datalogic reserves the right to change any specification at any time without prior notice.

Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U. All other brand and product names may be trademarks of their respective owners.

Microsoft Windows[®], Windows[®] 2000, Windows[®] CE .Net, Windows[®] NT, and Windows[®] XP and the Windows logo are registered trademarks of Microsoft Corporation.

Patents

This product may be covered by one or more of the following patents: 4603262 • 4639606 • 4652750 • 4672215 • 4699447 • 4709369 • 4749879 • 4786798 • 4792666 • 4794240 • 4798943 • 4799164 • 4820911 • 4845349 • 4861972 • 4861973 • 4866257 • 4868836 • 4879456 • 4939355 • 4939356 • 4943127 • 4963719 • 4971176 • 4971177 • 4991692 • 5001406 • 5015831 • 5019697 • 5019698 • 5086879 • 5115120 • 5144118 • 5146463 • 5179270 • 5198649 • 5200597 • 5202784 • 5208449 • 5210397 • 5212371 • 5212372 • 5214270 • 5229590 • 5231293 • 5232185 • 5233169 • 5235168 • 5237161 • 5237162 • 5239165 • 5247161 • 5256864 • 5258604 • 5258699 • 5260554 • 5274219 • 5296689 • 5298728 • 5311000 • 5327451 • 5329103 • 5330370 • 5347113 • 5347121 • 5371361 • 5382783 • 5386105 • 5389917 • 5410108 • 5420410 • 5422472 • 5426507 • 5438187 • 5440110 • 5440111 • 5446271 • 5446749 • 5448050 • 5463211 • 5475206 • 5475207 • 5479011 • 5481098 • 5491328 • 5493108 • 5504350 • 5508505 • 5512740 • 5541397 • 5552593 • 5557095 • 5563402 • 5565668 • 5576531 • 5581707 • 5594231 • 5594441 • 5598070 • 5602376 • 5608201 • 5608399 • 5612529 • 5629510 • 5635699 • 5641958 • 5646391 • 5661435 • 5664231 • 5666045 • 5671374 • 5675138 • 5682028 • 5686716 • 5696370 • 5703347 • 5705802 • 5714750 • 5717194 • 5723852 • 5750976 • 5767502 • 5770847 • 5786581 • 5786585 • 5787103 • 5789732 • 5796222 • 5804809 • 5814803 • 5814804 • 5821721 • 5822343 • 5825009 • 5834708 • 5834750 • 5837983 • 5837988 • 5852286 • 5864129 • 5869827 • 5874722 • 5883370 • 5905249 • 5907147 • 5923023 • 5925868 • 5929421 • 5945670 • 5959284 • 5962838 • 5979769 • 6000619 • 6006991 • 6012639 • 6016135 • 6024284 • 6041374 • 6042012 • 6045044 • 6047889 • 6047894 • 6056198 • 6065676 • 6069696 • 6073849 • 6073851 • 6094288 • 6112993 • 6129279 • 6129282 • 6134039 • 6142376 • 6152368 • 6152372 • 6155488 • 6166375 • 6169614 • 6173894 • 6176429 • 6188500 • 6189784 • 6213397 • 6223986 • 6230975 • 6230976 • 6244510 • 6259545 • 6260763 • 6266175 • 6273336 • 6276605 • 6279829 • 6290134 • 6290135 • 6293467 • 6303927 • 6311895 • 6318634 • 6328216 • 6332576 • 6332577 • 6343741 • 6454168 • 6478224 • 6568598 • 6578765 • 6705527 • 6857567 • 6974084 • 6991169 • 7051940 • 7170414 • 7172123 • 7201322 • 7204422 • 7215493 • 7224540 • 7234641 • 7243850 • 7374092 • 7407096 • 7490770 • 7495564 • 7506816 • 7527198 • 7527207 • 7537166 • 7562817 • 601 26 118.6 • AU703547 • D312631 • D313590 • D320011 • D320012 • D323492 • D330707 • D330708 • D349109 • D350127 • D350735 • D351149 • D351150 • D352936 • D352937 • D352938 • D352939 • D358588 • D361565 • D372234 • D374630 • D374869 • D375493 • D376357 • D377345 • D377346 • D377347 • D377348 • D388075 • D446524 • D606544 • EP0256296 • EP0260155 • EP0260156 • EP0295936 • EP0325469 • EP0349770 • EP0368254 • EP0442215 • EP0498366 • EP0531645 • EP0663643 • EP0698251 • EP01330772 • EP870761 • GB2252333 • GB2284086 • GB2301691 • GB2304954 • GB2307093 • GB2308267 • GB2308678 • GB2319103 • GB2333163 • GB2343079 • GB2344486 • GB2345568 • GB2354340 • ISR107546 • ISR118507 • ISR118508 • JP1962823 • JP1971216 • JP2513442 • JP2732459 • JP2829331 • JP2953593 • JP2964278 • MEX185552 • MEX187245 • RE37166 • RE40071 • Other Patents Pending

Table of Contents

- Datalogic™ JavaPOS Device Services 1**
- Introduction1
- Document Conventions1
- About Datalogic JavaPOS Device Services1
- Datalogic Products Supported2
- Limitations4
- Installation5
- Introduction5
- Windows Installation6
- Linux Installation10
- Verification11
- Example - Configuring a Scanner12
- JER Editor14
- Technical Details16
- Windows17
- Linux17
- SuSE19
- Fedora19
- PATH — WINDOWS ONLY20
- Device Service Control20
- dls.properties file20
- Device Service Logging and Debug Capabilities21
- Device Service Logging21
- Logging control – how to control logging21
- Logging levels21
- Standard JavaPOS Scanner Operations22
- Power Reporting Property22
- Check Health Method22
- Bar code data23
- ScanData property23
- ScanDataLabel property23
- ScanDataType property23
- Statistics23
- CapStatisticsReporting Property = True23
- CapUpdateStatistics = False23
- Firmware Update24
- Standard JavaPOS Scale operations27

Table of Contents

Power Reporting Property	27
Check Health Method	27
Display	27
Live Weight Display	28
Scanner Direct IO Commands	29
Scale Direct IO Commands	30
Scanner and Device Service Configuration	31
Appendix A. Remote Management Support.....	33
Sequence Diagram	34
JMX MBeans Browser using jconsole	35
WMI/JMX MBeans Properties	37
Avalanche Support	41
DLSJavaPOS Properties	44
JavaPOS Registry	46
Appendix B. Auto Installation Script.....	49
Creation and use of auto-installation script	49
Contents of install.bat	52
Contents of auto-install.xml file	52

Datalogic™ JavaPOS Device Services

Introduction

Document Conventions

Formatting conventions are used throughout this guide to provide a consistent method for representing screen shots and command entries.



Notes contain additional information of interest to the reader.

Filenames, paths, field selections, and data or keystrokes entered by the user are shown in this `monospaced` typeface.

Controls including command bar sequences, prompts, fields, checkboxes and radio-buttons are printed in this **bold** typeface.

About Datalogic JavaPOS Device Services

These Device Services are current to UPOS version 1.13, published in January 2004. These Device Services provide support for all functionality described in the *Unified POS Retail Peripheral Architecture*, version 1.13 and the JavaPOS appendix to that spec. It is available online from the National Retail Federation at <http://www.javapos.com/>.

In addition, Direct IO support is provided for all commands documented in IBM's Universal Serial Bus OEM Point-of-Sale Device Interface Specification, Version 1.29., and for limited commands in the RS-232 and RS-232 Single Cable interfaces. Instructions for accessing Direct IO commands are provided later in this document.

Datalogic Products Supported

Products with RS-232 Std, RS-232 SC, and OEM USB interfaces are generally supported. Products released after the publication of this manual may not be listed in this table, but may still be supported by JavaPOS. Please contact Datalogic Technical support or your Datalogic representative for questions about specific models.

Table 1. Datalogic Products

Device Type	Scanner			Scale		
	RS232 Std	RS232 SC	OEM USB	RS232 Std	RS232 SC	OEM USB
Table Top Scanner/Scales						
Magellan 3200	●	●	●			
Magellan 3300	●	●	●			
Magellan 2200VS	●	●	●			
Magellan 2300HS	●	●	●			
Magellan 800i	●	●	●			
Magellan 8100	●	●	●	●	●	●
Magellan 8200	●	●	●	●	●	●
Magellan 8300	●	●	●	●	●	●
Magellan 8400	●	●	●	●	●	●
Magellan 8500	●	●	●	●	●	●
Magellan 8500xT	●	●	●	●	●	●
Magellan 9500	●	●	●			

Device Type	Scanner			Scale		
	RS232 Std	RS232 SC	OEM USB	RS232 Std	RS232 SC	OEM USB
Table Top Scanner/Scales (continued)						
Magellan 9800	●	●	●	●	●	●
Magellan 1000i	●		●			
Magellan 1100i	●		●			
Magellan 1400i	●		●			
Duet	●		●			
VS800	●		●			
Handheld Scanners						
GD41XX	●		●			
GM41XX	●		●			
GBT41XX	●		●			
GD44XX	●		●			
GBT44XX	●		●			
GM44XX	●		●			
QS6000+	●		●			
QS2500	●		●			
QS6500	●		●			

Device Type	Scanner			Scale		
	RS232 Std	RS232 SC	OEM USB	RS232 Std	RS232 SC	OEM USB
Handheld Scanners (continued)						
QS6500BT	●		●			
QD23XX	●		●			
QD21XX	●		●			
PD71XX	●		●			

Limitations

The following limitations apply to this version of the Datalogic JavaPOS Device Services:

- For an RS-232 Standard scale device, only the SASI scale interface is supported.
- For the QS2500 and Gryphon, the only supported interface is OEM/IBM USB (no serial interface).
- For Duet, VS800, and QS6000+, there is no support under Linux for the OEM/IBM USB interface due to limitations of the interface hardware.
- Windows operating system support is limited to Windows XP and later versions.

Installation

Introduction

Datalogic JavaPOS is a set of Java based drivers that allow Java application developers to communicate with Datalogic based Point of Sale Scales and Scanners. As long as the Java application adheres to the JavaPOS specification up to 1.13, it does not need to be written with the Datalogic drivers in mind, but rather should work with any JavaPOS 1.13 or less compliant drivers. The Datalogic JavaPOS drivers can be installed on any system with a pre-existing Java based Point of Sale application, and (with some limited configuration) the Point of Sale application should have no problems interacting with Datalogic scales and scanners.

These drivers were written, tested and verified to work on the following operating systems:

- Microsoft Windows XP SP3, Vista, Windows 7
- Fedora Core Linux versions 5 through 9
- SuSE Linux Professional 9.3, CentOS 5, OpenSuSE 11, Ubuntu

For a specific list of Datalogic scale and scanner brands known to work under Windows and Linux, please contact Datalogic Technical Support or your representative.

This document discusses three topics related to installation of the Datalogic JavaPOS drivers:

1. [Installation](#) of the software under both Windows and Linux.
2. Quick demonstration of a test application in [Verification on page 11](#).
3. [Technical Details on page 16](#) — a detailed description of what happens during the installation process.

Windows Installation

Datalogic JavaPOS has the following requirements for installation on a Windows system:


- Sun Java runtime environment version 1.4 or later (available from <http://www.oracle.com/technetwork/java/index.html>)
- Administrator privileges for the current user




If Datalogic JavaPOS is already installed on your computer, you must uninstall it before installing again.

To install Datalogic JavaPOS, perform the following steps:


1. Double-click the `setup.jar` file. The installer starts and a **Welcome** dialog is displayed.

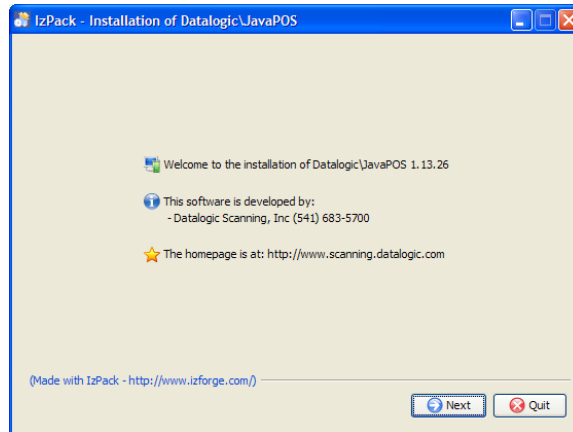


2. Click **Next**. You must click to indicate you accept the terms of the End User License Agreement (EULA) in order to continue with the installation.

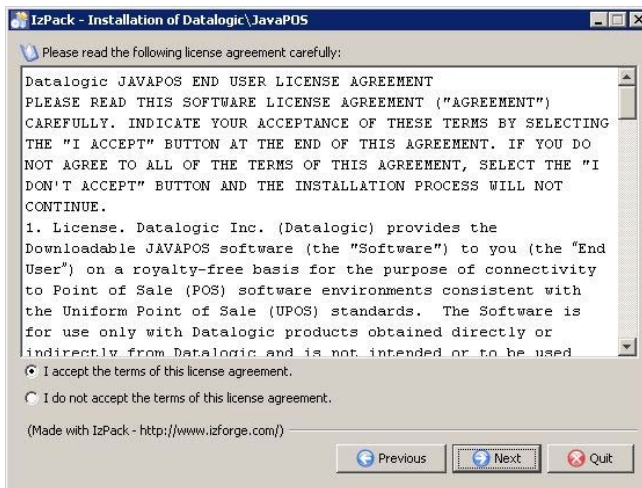


3. Click **Next**. You are prompted to enter an installation path (the default is C:\Program Files\Datalogic\JavaPOS).

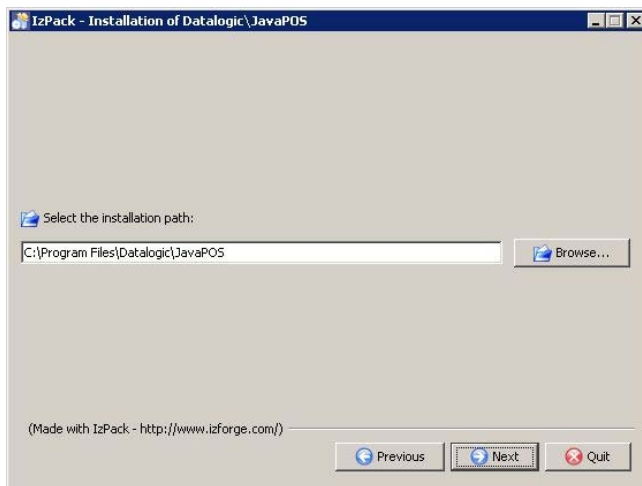

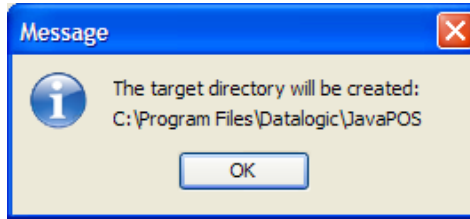


If Datalogic JavaPOS is already present on your computer, a warning is displayed.

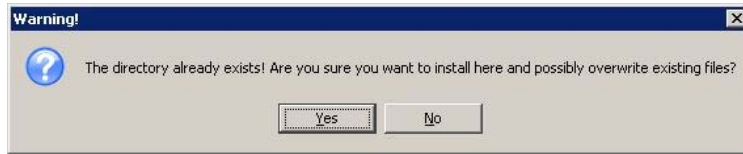


Click **No** to halt the installation. Uninstall Datalogic JavaPOS, then return to step 1 of this procedure.


- Available packages for the current version are displayed. Only the Base Datalogic Drivers are absolutely required. If installing on a system for the first time to test the functionality of the drivers, it is recommended that all packages be installed. It is important to realize that these drivers are dependant on many of these files. If some packages are unchecked, it may render the drivers unusable, unless the required files are already installed on the system.

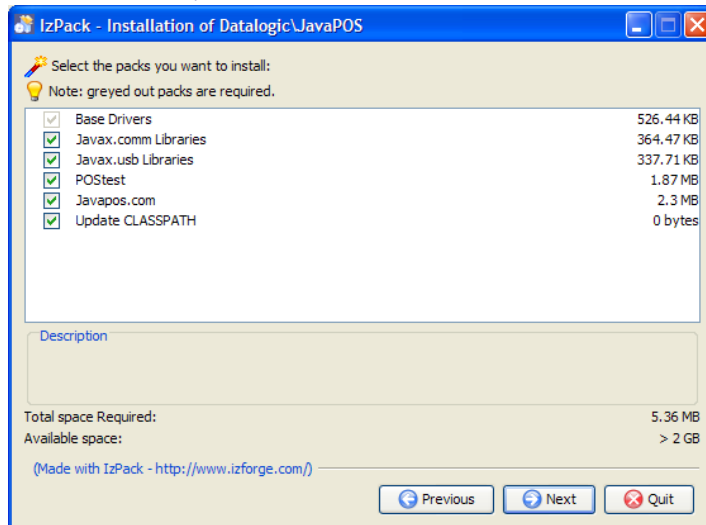


- Click **Next**. An installation progress dialog is displayed.

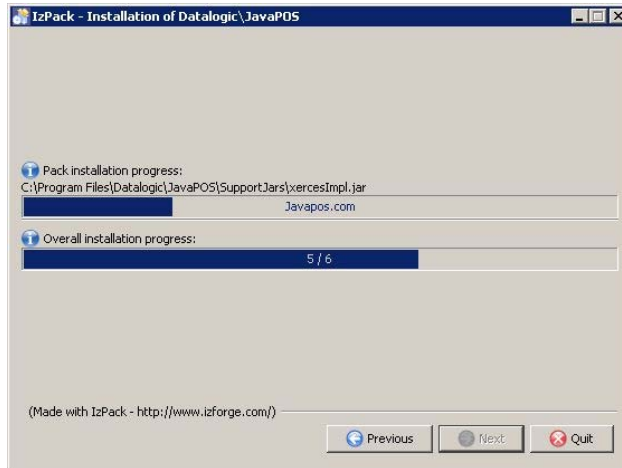

When the **Installation Completed** message is displayed, click **Done**.

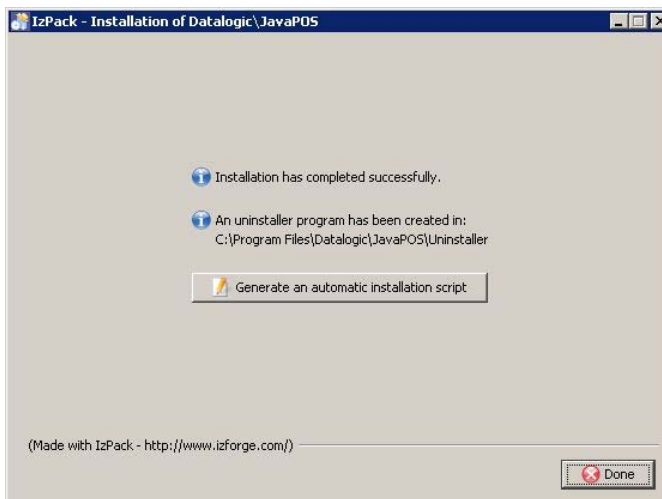

A message appears to remind that a system reboot is required for the changes to take effect.

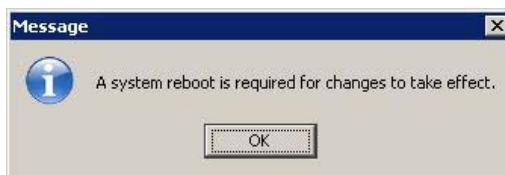

- Click **OK**, then re-log onto your computer.

Linux Installation

As with the Windows operating system, Linux requires version 1.5 or later of the Java Runtime Environment. Visit <http://www.oracle.com/technetwork/java/index.html> for downloading and installation instructions. The Java application must exist in your system path in order for the Datalogic JavaPOS application links to function properly.


If Fedora Core 3, CentOS or Ubuntu is installed as a Workstation, it installs a GNU java runtime environment. This JRE is not adequate for installing or running Datalogic JavaPOS. Install the SUN JRE. After this is complete, it will be necessary to ensure that the SUN version of Java is in the system execution path ahead of the one in `/usr/bin`. It may even be desirable to delete the `/usr/bin/java` file prior to installing the SUN JRE, then ensuring the SUN Java executable is in the system execution path.

Under the Linux operating system, the installation procedure is exactly the same as for Windows. If the installer is not logged on as the root user, the installation procedure terminates with a message reminding you to log on as root.

From a terminal window under either Gnome or KDE, execute the following command from the same folder where the `setup.jar` file exists (remember, Java must be found in the system path):

```
java -jar setup.jar
```

This command starts the automated Java-based installer. The screens and prompts are the same as for windows, with the exception of the “packages” window. It resembles the following window:

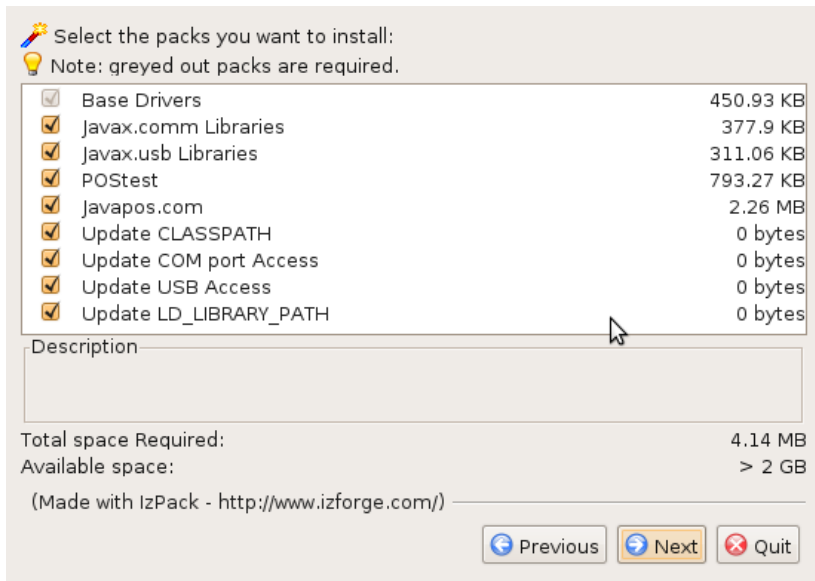

After running the installer, you must log off and log back on for the settings to take effect.

Verification

The Datalogic JavaPOS installer automatically installs a POSTest application for testing all kinds of JavaPOS devices. If one of the previously discussed Datalogic/Datalogic scanners or scales is available, you can test the drivers to make sure they were installed correctly.

There are shell scripts in the `/opt/d1s/JavaPOS` directory that can be used to run POSTest or JEREditor.

You can run POSTest from a command prompt or terminal window by issuing the following command:

```
java com.jpos.POSTest.POSTest.jar
```


There is a new script that can be used to start POSTest:

`POSTest.sh` (`.csh`) is located in the JavaPOS directory (depending upon which shell is used).



If this command does not launch the application, the `CLASSPATH` is probably not configured properly. Restart your computer and try again.

After POSTest starts, the following screen is displayed:

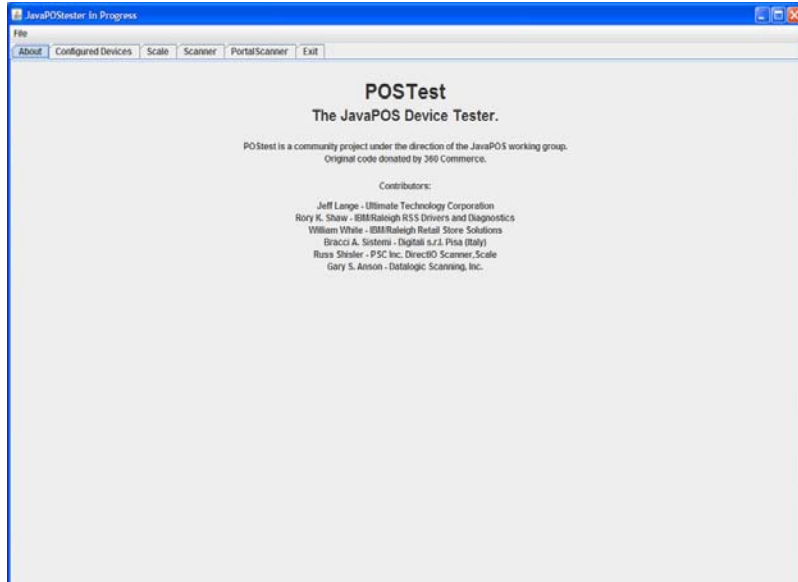


Most of the devices listed by this application are not yet supported. This procedure only addresses the Scale and Scanner devices.

Example - Configuring a Scanner

The following procedure describes how to configure a scanner, using the Datalogic Magellan 1000i Scanner under Windows as an example. Perform the following steps:

1. Plug the scanner into an active USB port. If Windows prompts you to restart your computer, do so.

2. Click the **Scanner** tab. The Scanner properties are displayed.

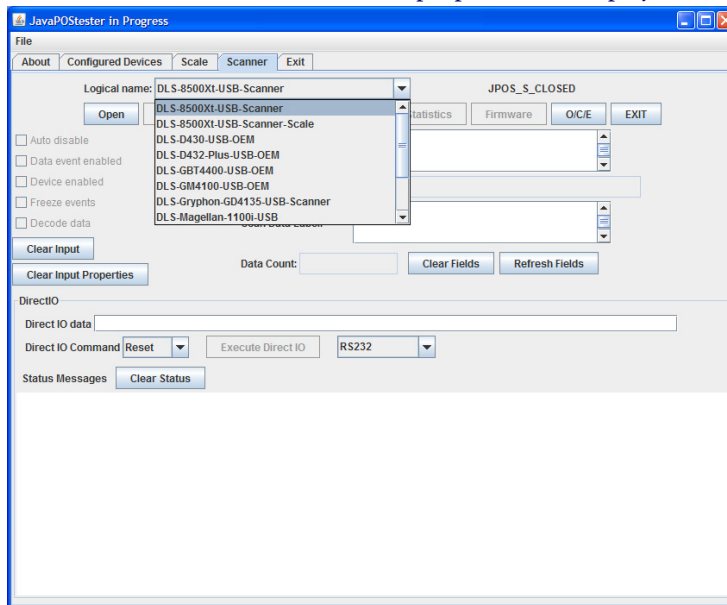

3. In the **Logical Name** field, select `DLS-1000i-USB-Scanner`
4. Click **Open**, then **Claim**.
5. Select the **Data event enabled**, **Device enabled**, and **Decode data** checkboxes.
6. Scan an item. If the scanner is properly connected and configured, the scan data is automatically displayed. (The **Data event enabled** checkbox is automatically cleared.)
7. Before scanning another item, click **Clear Data** and select **Data event enabled**.

If a “Failed” message is displayed, POSTest could not find the device’s logical name in the `jpos.xml` file.

To correct this error, locate all `jpos.xml` files on the system and identify the one that is picked up by the application during execution. A file is in the same directory where the application is launched (or listed first in the `CLASSPATH`) takes priority. The installer creates a `jpos.xml` file in the installation folder. This file contains the logical names for many different Datalogic devices. You may have to move some or all of these logical names to the active `jpos.xml` file.

JER Editor

The JER Editor helps you configure the devices listed in the `jpos.xml` file. You can edit this file manually, but JER Editor provides an easier mechanism for editing the devices' configuration properties. You can use it to add new devices or change COM port assignments.

The Datalogic JavaPOS installer places a shortcut to JER Editor in your **Start** menu.

If under Linux there is no shortcut link, you may have to log back onto the GUI desktop as the root user. The “root” user must create shortcut links for any other user who will need to run the Datalogic JavaPOS applications. The Linux installer only creates menu shortcut links under KDE, but desktop links are created under both KDE and Gnome.

You can also run `POSTest` from a command prompt or terminal window by issuing the following command:

```
java com.Datalogic.jpos.editor.DeviceEditor
```


There is a new script that can be used to start JER Editor:

`JEReditor.sh` (`.csh`) is located in the JavaPOS directory (depending upon which shell is used).



If this command does not launch the application, the `CLASSPATH` is probably not configured properly. Restart your computer and try again.

After JER Editor starts, a list of device types is displayed. Each device is identified by its logical name, as shown below:

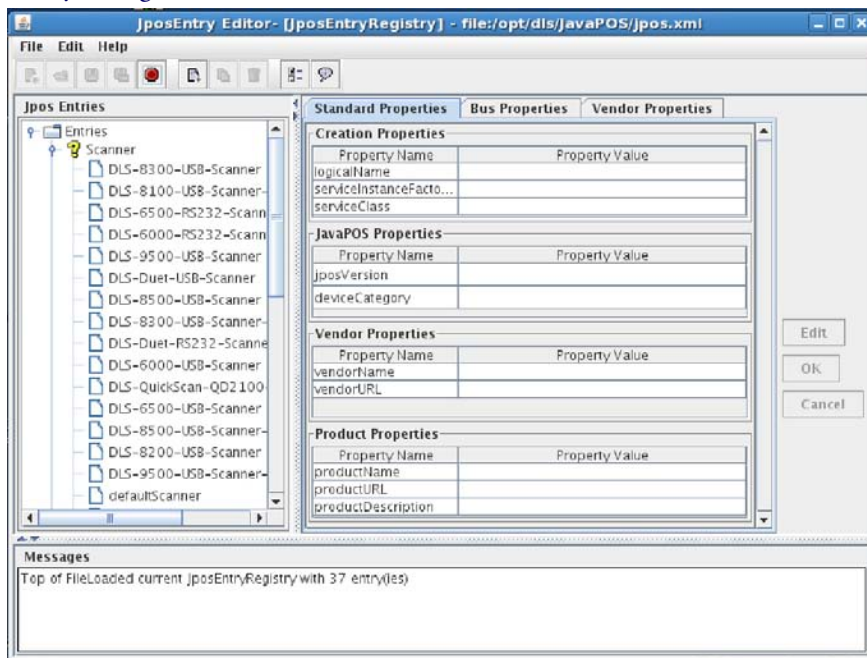

Most of the properties of predefined Datalogic devices will never need to be changed. One notable exception is the COM port assignments for RS-232 devices, which have to be modified if they are different from the default value. To change the COM port for an RS-232 device, perform the following steps:

1. Select the device's logical name (for example, Datalogic-6000-RS-232-Scanner for a scanner device).
2. Select the **Bus Properties** tab. Click **Edit**.
3. In the **portName** field, type the number of the correct COM port. Click **OK**.
4. Pull down the **File** menu and select **Save JposEntryRegistry**. The new value is saved.
5. Close the JER Editor.

Technical Details

Support Jars

The installation procedure for these drivers provides everything that is required to completely run the drivers with a standalone test application that uses JavaPOS. This may mean that on an actual POS system, some of these files may already exist in different folders. There is always a possibility that conflicts could result because of this, so it is important to remember that the CLASSPATH and PATH required by the Datalogic drivers is appended to the end of the current CLASSPATH and PATH. If there are older versions of some of these jar files in the CLASSPATH ahead of the ones required by the Datalogic drivers, it may be necessary to rearrange the CLASSPATH accordingly. Every situation will have to be looked at uniquely.

The Datalogic drivers were written to the JavaPOS 1.13 specification, so some of the support jar files are a result of the runtimes required to make this function under JavaPOS 1.13. Other support jar files are used for RS-232 and USB communications. If conflicts result it may be important to know what these files are. This is a list of files that get copied, and to which “package” they belong:

“.” = Install PATH

“Base Datalogic Drivers”

- ./DatalogicJavaPOS
- ./Win32Hid.dll (Windows ONLY)
- ./jpos.xml

“javax.comm. Libraries”

- ./SupportJars/RXTXcomm.jar
- ./SupportJars/javax.comm.properties
- ./SupportJars/rxtxParallel.dll (WINDOWS ONLY)
- ./SupportJars/rxtxSerial.dll (WINDOWS ONLY)
- ./SupportJars/librxtxSerial.so (LINUX ONLY)

“javax.usb Libraries”

- ./SupportJars/javax.usb.properties
- ./SupportJars/jsr80_linux-1.0.0.jar
- ./SupportJars/jsr80_ri-1.0.0.jar
- ./SupportJars/jsr80-1.0.0.jar
- ./SupportJars/libJavaxUsb-1.0.0.so

“POSTest”

- /SupportJars/POSTest.jar

“javapos.com”

```
./SupportJars/jcl.jar
./SupportJars/jcl_editor.jar
./SupportJars/jpos.properties
./SupportJars/jpos113-controls.jar
./SupportJars/xercesImpl.jar
./SupportJars/xml-apis.jar
```

“Update CLASSPATH”**Windows**

A new system environment variable DLS_CLASSPATH is created that contains the following string:

```
.;C:\Program Files\Datalogic\JavaPOS;C:\Program
Files\Datalogic\JavaPOS\SupportJars;C:\Program
Files\Datalogic\JavaPOS\DLSJavaPOS.jar;C:\Program
Files\Datalogic\JavaPOS\SupportJars\jsr80-
1.0.0.jar;C:\WINDOWS\system32\comm.jar;C:\Program
Files\Datalogic\JavaPOS\SupportJars\jsr80_linux-
1.0.0.jar;C:\Program
Files\Datalogic\JavaPOS\SupportJars\jsr80_ri-
1.0.0.jar;C:\Program
Files\Datalogic\JavaPOS\SupportJars\POSTest.jar;C:\Prog
ram Files\Datalogic\JavaPOS\SupportJars\xml-
apis.jar;C:\Program
Files\Datalogic\JavaPOS\SupportJars\jcl.jar;C:\Program
Files\Datalogic\JavaPOS\SupportJars\jpos113-
controls.jar;C:\Program
Files\Datalogic\JavaPOS\SupportJars\xercesImpl.jar;C:\P
rogram
Files\Datalogic\JavaPOS\SupportJars\jcl_editor.jar;
```

This environment variable is then appended to the end of the system environment variable “CLASSPATH”.

Linux

A new variable, Datalogic_CLASSPATH is created in /etc/profile file, that contains the following string:

```
Datalogic_CLASSPATH=./opt/DLS/JavaPOS:/opt/Datalogic/
JavaPOS/SupportJars:/opt/DLS/JavaPOS/DLSJavaPOS.jar:/
opt/DLS/JavaPOS/SupportJars/jsr80-1.0.0.jar:/opt/DLS/
JavaPOS/SupportJars/comm.jar:/opt/DLS/JavaPOS/
SupportJars/jsr80_linux-1.0.0.jar:/opt/DLS/JavaPOS/
SupportJars/jsr80_ri-1.0.0.jar:/opt/DLS/JavaPOS/
SupportJars/POSTestPOSTest.jar:/opt/DLS/JavaPOS/
```

```
SupportJars/xml-apis.jar:/opt/DLS/JavaPOS/SupportJars/  
jcl.jar:/opt/DLS/JavaPOS/SupportJars/jpos113-  
controls.jar:/opt/DLS/JavaPOS/SupportJars/  
xercesImpl.jar:/opt/DLS/JavaPOS/SupportJars/  
jcl_editor.jar:C
```

This variable is then appended to the end of any existing classpath, then exported. As in the following:

```
CLASSPATH=$CLASSPATH:$DLS_CLASSPATH  
Export CLASSPATH
```

“Update COM port Access”- LINUX ONLY

Under Linux there are a couple of changes that need to be done to the com ports in order for the Datalogic serial devices to function properly.

All users must be granted access to use the comports.

By default the installation program will only change the authorization for the first four com ports on the system. This is done by adding lines to the `/etc/rc.d/rc.local` or `/etc/rc.d/boot.local` file.

```
chmod a+rw /dev/ttyS0  
chmod a+rw /dev/ttyS1  
chmod a+rw /dev/ttyS2  
chmod a+rw /dev/ttyS3
```

If need be these changes can be manually undone after the installation process has completed. It is also just as easy to add more com ports to the list, if required.

The com ports are changed to “raw” mode.

The default behavior for com ports under Linux is for them to act as remote terminals. This means that certain binary data is converted — this needs to be turned off. The first four com ports are changed to “raw” mode in the `/etc/rc.d/rc.local` or `/etc/rc.d/boot.local` file.

```
stty -file=/dev/ttyS0 raw  
stty -file=/dev/ttyS1 raw  
stty -file=/dev/ttyS2 raw  
stty -file=/dev/ttyS3 raw
```

If additional com ports need to be turned into raw mode, or some need to be changed back to non raw mode, the `/etc/rc.d/rc.local` (fedora) or `/etc/rc.d/boot.local` (SuSE) file can be edited as required.

“Update USB Access”- LINUX ONLY

Under Fedora and SuSE the default behavior is to grant limited access to the USB ports. The access to these ports is changed by modifying the `/etc/fstab` file under SuSE, and the `/etc/rc.d/rc.sysinit` file under Fedora.

SuSE

The following line in the `/etc/fstab` file:

```
usbfs /proc/bus/usb usbfs noauto 0 0
```

is changed to:

```
usbfs /proc/bus/usb usbfs
noauto,devmode=0666 0 0
/sys/bus/usb/drivers /proc/bus/usb usbfs
auto.devmode=0666 0 0
```

Fedora

The following line in the `/etc/rc.d/rc.sysinit` file:

```
[ -d /proc/bus/usb ] && mount -n -t usbfs /proc/bus/usb
/proc/bus/usb
```

is changed to:

```
[ -d /proc/bus/usb ] && mount -n -t usbfs -o
devmode=0666 /proc/bus/usb /proc/bus/usb
```

“Update LD_LIBRARY_PATH”- LINUX ONLY

The `LD_LIBRARY_PATH` variable needs to be defined because some the the low level Java IO uses JNI to talk to the devices. The `LD_LIBRARY_PATH` helps Java find any shared objects that need to be loaded at the appropriate times. A new variable `Datalogic_LD_LIBRARY_PATH` is created in the `/etc/profile` file, then appended to the `LD_LIBRARY_PATH` variable, as in the following example lines:

```
Datalogic_LD_LIBRARY_PATH=/opt/dls/JavaPOS/SupportJars
LD_LIBRARY_PATH=$LD_LIBRARY_PATH:$Datalogic_LD_LIBRARY_
PATH
export LD_LIBRARY_PATH
```

**Any JavaPOS app must use the java command line option:**

```
-Djava.library.path=/opt/dls/JavaPOS/SupportJars
```

to ensure proper libraries are used

PATH — WINDOWS ONLY

During the installation process a new system environment variable by the name of `Datalogic_PATH` is created that contains the following string:

```
c:\Program Files\Datalogic\JavaPOS;c:\Program Files\Datalogic\JavaPOS\SupportJars.
```

This environment variable is then appended to end of the system environment variable “`PATH`”. This is required so the runtime libraries of “`Win32Hid.dll`” and “`rtxSerial.dll`” will be found.

Device Service Control

The Datalogic Device Controls use a properties file to control certain optional operations, and to control trace logging. This file is named `dls.properties`. Upon initial service startup, if the service does not find the `dls.properties` file, it extracts a default version from the JAR file and places it in the same folder as the Java application started from. The user can now change the default settings, but the file must remain in the application directory.

`dls.properties` file

Several of the entries are related to trace logging — see next section for details. The two remaining entries are described here:

```
com.Datalogic.jpos.service.ScaleService.ThrowExceptionOnScaleMotion
```

Defaults to `False`. If set `True`, the service will throw an exception when a weight request times out due to `Scale In Motion (112)` or `Scale At Zero (114)`. If set `False`, the service reports a timeout.

```
com.Datalogic.jpos.interpretation.autoLoadConfig
```

Default is `True`. When `True`, the service will attempt to configure the scanner/scale as per settings in the `jpos.xml` file upon startup. If `False`, the service will not send configuration data to the scanner/scale upon startup.



This must be set `True` if `jpos.xml` settings are changed by the user.

Device Service Logging and Debug Capabilities

The Datalogic Device Services provide the ability to turn on logging of certain events and to control the level of detail associated with the log. Events are logged to a file named `dlstrace.log`, which is created in the directory from which the user's JavaPOS application is launched. To ensure that data is retained for a reasonable period of time, up to 5 logs can be maintained, with the size and verbosity of the log configured by settings in a control file. The control file is a text editable file named `Datalogic.properties`, which exists in the same directory. Configurable settings are:

- log name (defaults to `jpostrace.log`)
- log size (defaults to 10 MB)
- number of logs to keep (defaults to 5)
- logging trace level (defaults to High)

Device Service Logging

Logging control – how to control logging

The user can control the Device Service logging by editing the `dls.properties` file. User controllable properties are:

Table 2. Device Service logging

	Property	Description
Source file:	<code>TraceSourceName = True</code>	Puts the name of the source .java file in the trace log
Source path:	<code>TrimSourceName = True</code>	Trims path name for log
When to log:	<code>NumberOfWritesBefore Flush = <1></code>	Default is 1, this controls how much log data is buffered by Windows before a write is done to the log. In production, a higher number (e.g. 50) may improve system performance.
Name:	<code>LogFile = <filename></code>	Default to <code>DatalogicTrace.log</code>
Size:	<code>MaxFileSizeInMegabytes = <1 to 10></code>	Defaults to 10 megabytes
Log Levels:	<code>TraceLevel = <0 to 4, see below></code>	Defaults to 4

Logging levels

- 0 = OFF – no logging (not recommended)

-
- 1 = Errors – errors and exceptions logged
 - 2 = Errors and Some Diagnostics – errors plus additional diagnostic data
 - 3 = Errors, Diagnostics, and Trace – above plus developer trace messages
 - 4 = Errors, Diagnostics, Trace, and Method entry/exit – most detailed for debug

Standard JavaPOS Scanner Operations

See the *Unified POS Retail Peripheral Architecture v1.13* for details on Properties and Methods

Power Reporting Property

Scanner CapPowerReporting is *NONE*. Power reporting is not supported by Datalogic scanners.

The PowerNotify property is not used, and changes to it are ignored by Datalogic JavaPOS device services. StatusUpdate events are not initiated by the Datalogic JavaPOS device services.

Check Health Method

The scanner supports health check. Possible replies include:

- Internal Hcheck: Successful
- Internal Hcheck: Not successful, <subsystem> Fail;

Subsystems may include the following:



The Scanner is model dependent, not all scanners have all the following subsystems

- Motor
- Horizontal Laser
- Vertical Laser
- Internal Scale
- Remote Display
- EAS system

Interactive Hcheck: Complete

Bar code data

ScanData property

Always has bar code data when `DataEvent` is fired

ScanDataLabel property

- Contains data if `DecodeData = True`
- Computes check digit for UPC labels if not present from scanner.

ScanDataType property

- Contains label type if `DecodeData = True`
- Label type as reported on scanner interface – the scanner assigns a label type identifier and sends this with the label data across the OEM USB and RS-232 Single Cable interfaces. The Device Service translates this into one of the UPOS defined label types.

Statistics

CapStatisticsReporting Property = True

Scanner supports `retrieveStatistics` method. This method returns a pointer to an XML data buffer.


Supported statistics are:

- Device category
- Manufacturer
- Model number
- Serial Number
- Firmware revision
- Interface type
- Power on time
- Number of label scans


CapUpdateStatistics = False


Statistics cannot be updated or reset. Datalogic scanners do not support the `ResetStatistics()` or `UpdateStatistics()` methods.

Firmware Update

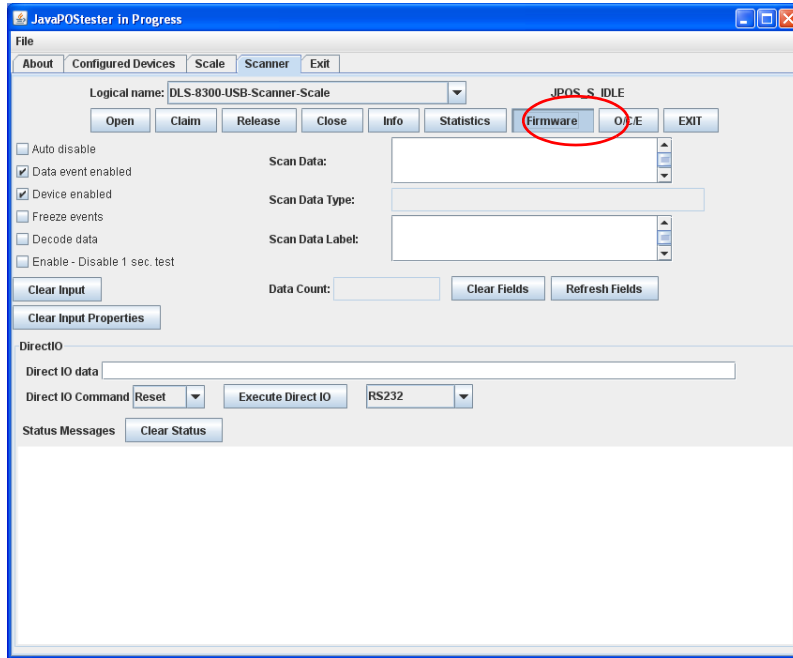


Upon selecting the “Firmware” update button, the following dialog will be presented. The user can then browse to the required update firmware. There are two separate firmware file types: USB or RS-232. Each has the .DAT or .S37 extension respectively.

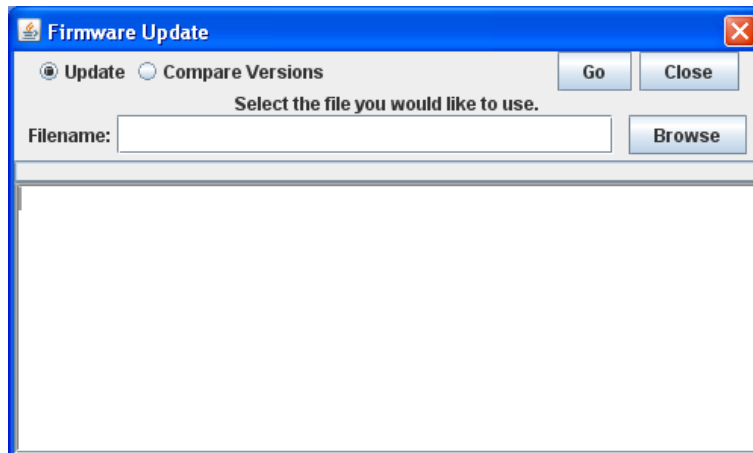


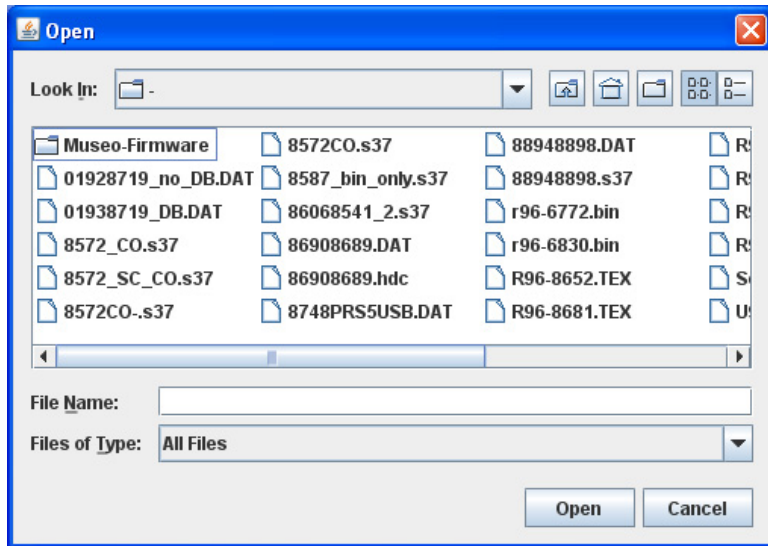


The dialog box will let the user compare or update the firmware. The following is a screen shot of a successful compare when the versions are equal.

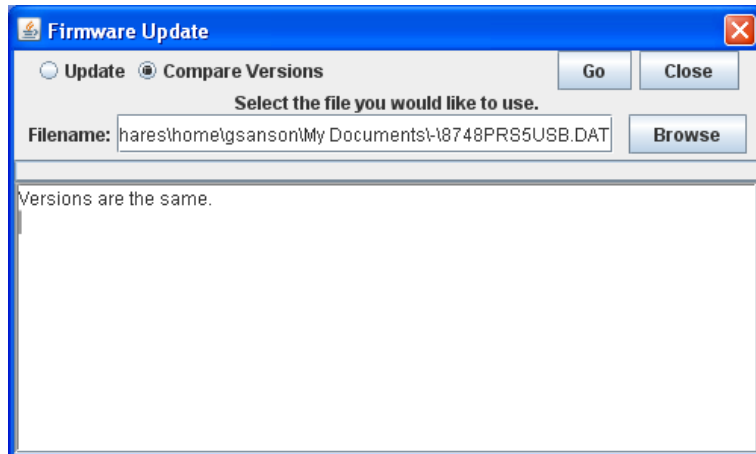


The following is a screen shot of a successful compare when the versions are different.

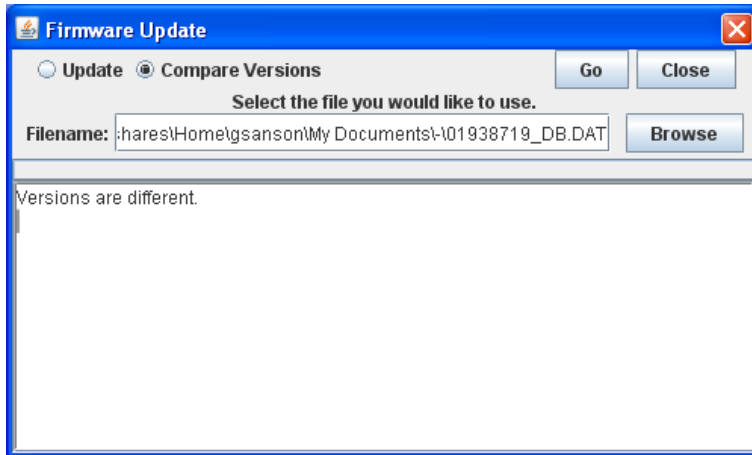

This is a screen shot of the firmware update in progress. The status indicator is updated periodically to inform the user of the percentage of update completed.

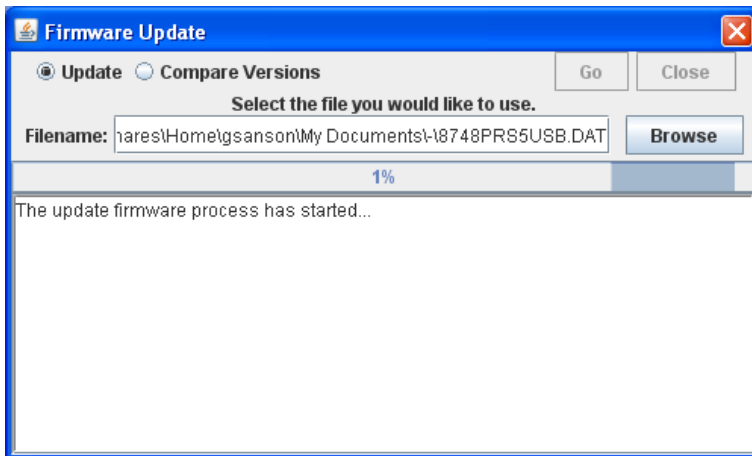

Below is an example of a successfully completed firmware update.

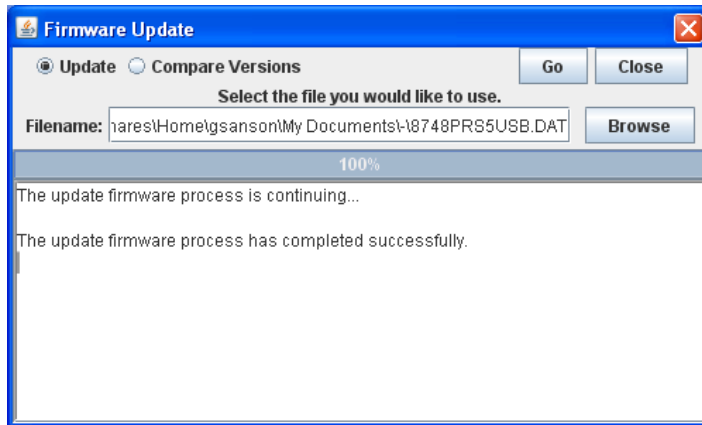

Standard JavaPOS Scale operations

See the *Unified POS Retail Peripheral Architecture v1.13* for Properties and Methods.

Power Reporting Property

Scale `CapPowerReporting` is `JavaPOS_PR_NONE: 0`. Power reporting is not supported by Datalogic scanner/scales.

The `PowerNotify` property is not used, and changes to it are ignored by Datalogic JavaPOS Device Services. `StatusUpdate` events are not fired by the Datalogic JavaPOS Device Services.

Check Health Method

The scale supports health check, included as part of scanner response. There is no separate health check for scanner or scale. The command is supported on a scale as long as it is claimed, but always reports back a `ResultCode` of “`JavaPOS_SUCCESS`”.


Display

Scale supports a remote display, but does not support text display. The POS application cannot send data to the scale’s remote display (`CapDisplayText = FALSE`).

Live Weight Display

The live weight display can be enabled by selecting the following check boxes in this specific order:

1. Check “Status Notify enabled.”
2. Check “Data Event enabled.”
3. Check “Device enabled.”

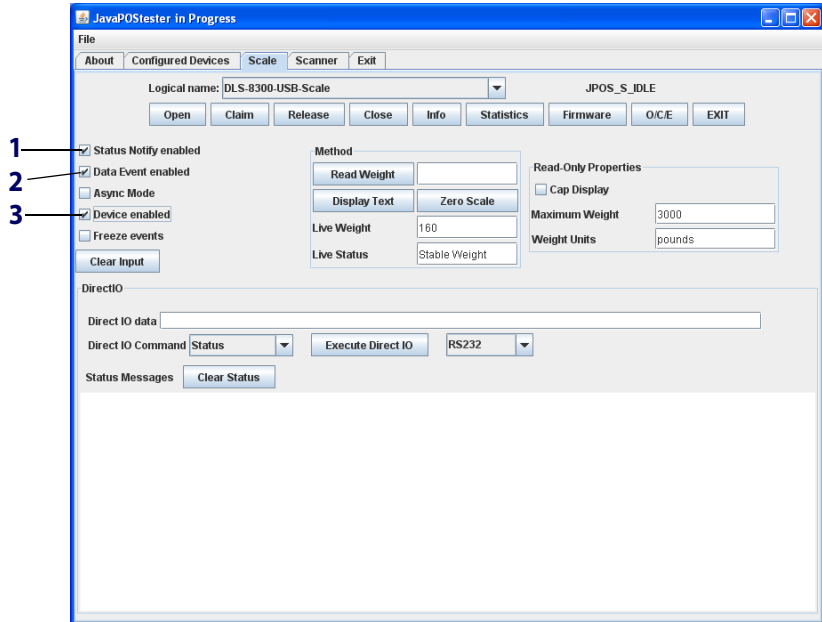

After this sequence has been performed, the Live Weight and Live Status fields in the Scale tab will be automatically updated as items are added or removed from the attached scale.

Scanner Direct IO Commands

The scanner supports a number of Direct IO commands that allow access to the commands available on the interface which are not directly supported by UPOS. Applications may utilize the Direct IO commands by accessing the Direct IO Method (see the *Unified POS Retail Peripheral Architecture, version 1.13* for details on this method) with the appropriate arguments, as detailed below.

Table 3. OEM USB Direct IO Scanner Commands

Scanner Command	Cmd	pData	pString
Reset	1	None	None
Beeper enable	2	None or Input: Config String	Output: Status string
Beeper disable	3	None or Input: Config String	Output: Status string
Configure scanner	4	None or Input: Config String	Input: 9 byte config string Output: Status string
Report configuration	5	None or Input: Config String	Output: 9 byte config string
Configure 2-label flags	6	None or Input: Config String	Input: 8 byte 2-label config string Output: Status string
Report 2-label config	7	None or Input: Config String	Output: 8 byte 2-label config string
Report Information	8	None or Input: Config String	Output: Variable length string
Report Health	9	None or Input: Config String	Output: Variable length string
Report Statistics	10	None or Input: Config String	Output: Variable length string

Table 4. RS-232 Standard Scanner Direct IO Commands

Scanner Command	Cmd	pData	pString
Reset	1	None	None
Beep	11	None	None

Table 5. RS-232 Single Cable Direct IO Scanner/Scale Commands

Scanner Command	Cmd	pData	pString
Hard Reset	21	None	None
Scale Monitor	26	Output: Status	Output: None
Scale Status	27	None	Output: Scale status
Display Status	28	None	Output: Display status
Soft Power Down	29	None	None

Scale Direct IO Commands

The scale supports a number of Direct IO commands that allow access to the commands available on the OEM/IBM USB interface which are not directly supported by UPOS. Applications may utilize the Direct IO commands by accessing the Direct IO Method with the appropriate arguments, as detailed below.

Table 6. OEM/IBM USB Direct IO Scale Commands

Scale Command	Cmd	pData	pString
Reset	21	None	None
Enable extended status	22	Output: 3 byte status	Output: Status string
Disable extended status	23	Output: 2 byte status	Output: Status string
Configure scale	24	Output: 2 or 3 byte status	Input: Configuration string Output: Status string
Report configuration	25	Output: 2 or 3 byte status	Output: Configuration string

Scanner and Device Service Configuration

For the JavaPOS device services to work properly with a Datalogic scanner, it is crucial that interface-specific configuration items in the device service and scanner match. This restriction does not apply for the OEM USB interface, as there are no user-configurable items specific to this interface. However, the RS-232 Standard and RS-232 Single Cable have many configuration items that must be coordinated. The listing below for each of these interfaces describes the specific items and their relationships.

Scanner configuration is controlled through the scanner's configuration file, which is loaded into the scanner at the factory. Specific configuration items can be changed by using special programming label barcodes available in the product manual.

Device Service configuration is controlled through the `jpos.xml` file, accessible in the `Program files\Datalogic\JavaPOS` directory under Windows. Default values are shown in the table below. These values can be edited using the JER Editor to conform to the scanner values.

Table 7. RS-232 Standard Configuration

Scanner configuration item	JavaPOS XML configuration item
Baud rate	Baudrate
Parity	Parity
Data bits	Databits
Stop bits	Stopbits

Table 8. RS-232 Single Cable Configuration

Scanner configuration item	JavaPOS XML configuration item
Baud rate	Baudrate
Parity	Parity
Data bits	Databits
Stop bits	Stopbits
Prefix value, prefix enable/disable	rxPrefix, txPrefix (note: 0 = disable)
Suffix value, suffix enable/disable	rxTrailer, txTrailer (note: 0 = disable)
BCC	UseBCC

Table 9. Scale Configuration

Scale configuration item	JavaPOS XML configuration item
Baud rate	Baudrate
Parity	Parity
Data bits	Databits
Stop bits	Stopbits

Appendix A.


Remote Management Support

This section describes Remote Management support features included in the DLSJavaPOS version 1.13 and above. Remote Management consists of methods to retrieve statistical data about connected devices and the ability to update firmware through the JavaPOS interface. This update feature is also known as Host Download.


The current methods for statistical data retrieval use either the WMI (Windows Management Interface) or the Java JMX (Java Management Extension) using Managed Beans or MBeans. Each interface uses the `root/CIMV2/UPOS_Scanner` or `root/CIMV2/UPOS_Scale` structure. The following screen shots show the WMI & MBeans data using the Windows Management Information Tools and jconsole, respectively.

Sequence Diagram

The following diagram portrays the normal process with which the WMI or MBeans properties are populated.

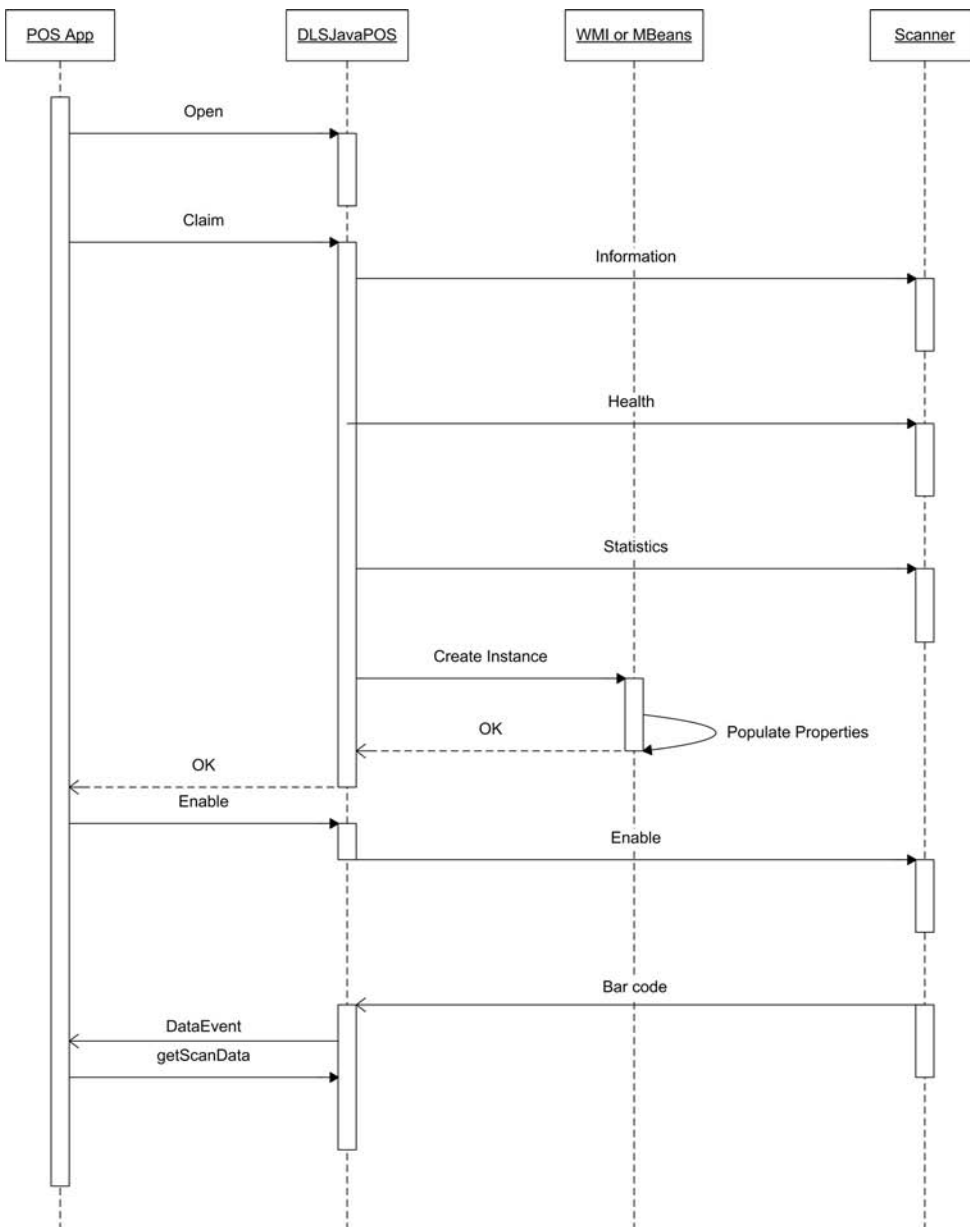

WMI Browser

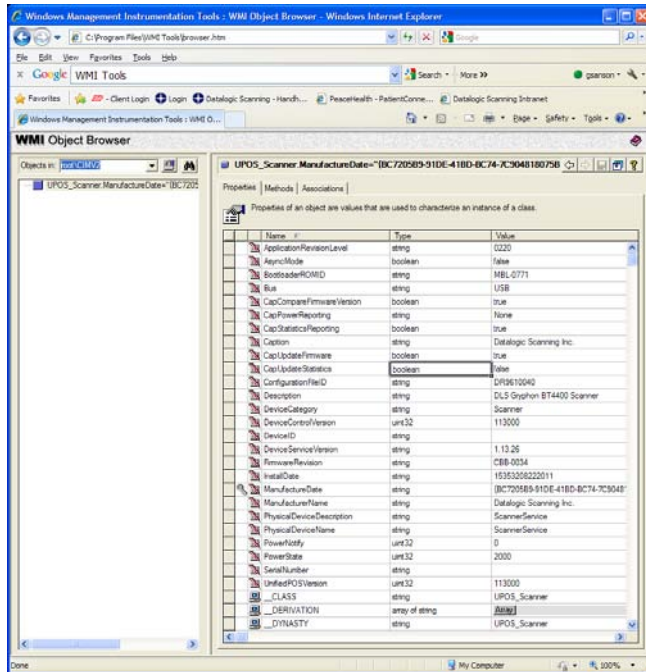

JMX MBeans Browser using jconsole

The following are screen shots of the jconsole application supplied with the JDK 1.5 or above. The JavaPOS application must be started with the option:

```
-Dcom.sun.management.jmxremote
```

so that the JVM will accept and reply to remote management calls.

JMX MBeans Browser using jconsole

The screenshot shows the JMX MBeans Browser window with the 'Scanner' MBean selected. The 'MBeanInfo' tab is active, displaying the following information:

Name	Value
ObjectName	CDM2:name=Scanner
ClassName	com.dls.jpos.service.ScannerScale
Description	Information on the management interface of the MBean
Constructor(s)	
Name	com.dls.jpos.service.ScannerScale
Description	Public constructor of the MBean
Parameter(s)	
Name	p1
Description	
Type	java.util.Hashtable


Below the constructor information, the 'Descriptor' tab is also visible, showing:

Name	Value
immutableInfo	true
interfaceClassName	com.dls.jpos.service.ScannerScaleMBean
mbean	false

The screenshot shows the JMX MBeans Browser window with the 'Scanner' MBean selected. The 'Attribute values' tab is active, displaying a list of attributes and their values:

Name	Value
ApplicationRevisionLevel	0220
BootloaderOMID	M8L-0771
Bus	USB
CameraHealth	
CapCompassFirmwareRevision	true
CapPowerReporting	None
CapStatisticsReporting	true
CapUpdateFirmware	true
CapUpdateStatistics	false
Caption	Datalogic Scanning
CommunicatorErrorCount	
ConfigurationID	DR36.10040
Description	Datalogic Scanning Device
DeviceCategory	Scanner
DeviceControlVersion	
DeviceID	
DeviceServiceVersion	1.13.26
EASDeactivateCount	
EASManualCount	
EASSystemHealth	
FirmwareRevision	c88-0034
GoodScanCount	
HorizontalLaserHealth	
HourPoweredCount	
InstallDate	16174708222011
LaserOnTime	
ManufactureDate	16174708222011
ManufacturerName	Datalogic Scanning
MechanicalRevision	0
ModelName	
MotorHealth	
MotorOnTime	
PhysicalDeviceDescription	Datalogic Scanning Device
PhysicalDeviceName	Datalogic Scanning Device
PowerNotify	0
PowerState	2000
SerialNumber	
UniflexPCVersion	11.2000
UniversalInterfaceApplicationOMID	
UniversalInterfaceBootloaderOMID	
VerticalLaserHealth	

A 'Refresh' button is located at the bottom of the attribute list.

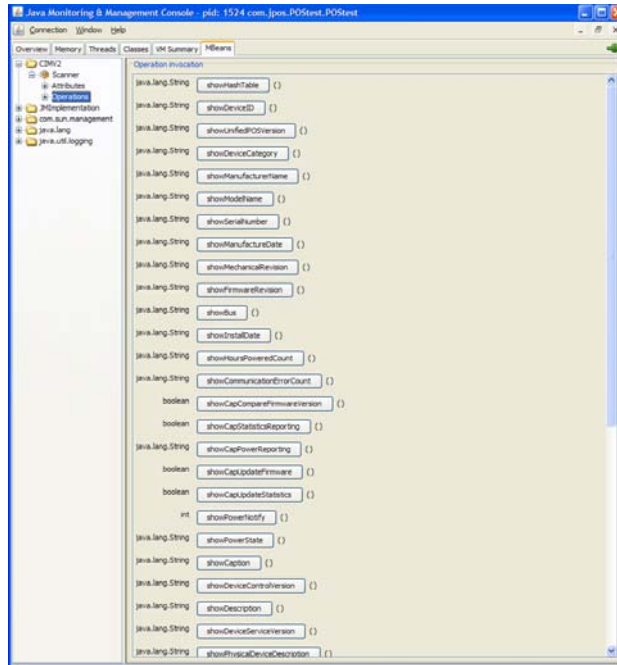

WMI/JMX MBeans Properties

This data is also returned by the getStatistics command. Some items are either null or 0 depending on the connected device. Scale-relevant information will not be valid for a scanner-only device. Items listed below are unique to Data-logic's implementation and differ from the properties listed in the UPOS specification. Some of the following properties may be omitted for configurations where they are not applicable.

Property: DeviceID

Description: A unique number used to identify the attached device

Device Category: Scanner, Scale, Portal Scanner

Property: ModelName

Description: Model number of attached device

Device Category: Scanner, Scale, Portal Scanner

Property: SerialNumber
Description: Serial number of attached device
Device Category: Scanner, Scale, Portal Scanner

Property: ScaleHealth
Device Category: Scale

Property: RemoteDisplayHealth
Device Category: Scale

Property: ConfigurationFileID
Device Category: Scanner, Portal Scanner

Property: ApplicationRevisionLevel
Device Category: Scanner, Portal Scanner

Property: BootloaderROMID
Device Category: Scanner, Portal Scanner

Property: UniversalInterfaceApplicationROMID
Device Category: Scanner, Portal Scanner

Property: UniversalInterfaceBootloaderROMID
Device Category: Scanner, Portal Scanner

Property: MotorHealth
Device Category: Scanner, Portal Scanner

Property: HorizontalLaserHealth
Device Category: Scanner, Portal Scanner

Property: VerticalLaserHealth
Device Category: Scanner, Portal Scanner

Property: CameraHealth
Device Category: Scanner, Portal Scanner

Property: MotorOnTime
Device Category: Scanner, Portal Scanner

Property: LaserTime
Device Category: Scanner, Portal Scanner

Property: EASSystemHealth
Device Category: Scanner, Portal Scanner

Property: EASDeactivateCount
Device Category: Scanner, Portal Scanner

Property: EASManualCount
Device Category: Scanner, Portal Scanner

Property: EASVersion
Device Category: Scanner, Portal Scanner

In addition to the items above there can also be Hand Held specific information. The following are only available for Hand Held scanners and includes wireless units.

Property: RadiolHealth
Device Category: Scanner

Property: RadiolHardwareVersion
Device Category: Scanner

Property: RadioSoftwareVersion
Device Category: Scanner

Property: BaseSoftwareVersion
Device Category: Scanner

Property: BaseModelNumber
Device Category: Scanner

Property: BaseSerialNumber
Device Category: Scanner

Property: BaseHoursPoweredCount
Device Category: Scanner

Property: BatteryChargeCycles
Device Category: Scanner

Property: TriggerPulls
Device Category: Scanner

Property: KeyPresses
Device Category: Scanner

Property: LaserTime
Device Category: Scanner

Property: LabelsScanned
Device Category: Scanner

Avalanche Support

The following are the contents of the scanner_info.txt file as well as the scanner_info.prf file. The scanner_info.prf file is used by Avalanche to populate its database for remote management.

```
# Raw data from scanner
# Info command
# bytes received[87] 0x1 0x2 0x41 0x36 0x31 0x30 0x30
0x30 0x32 0x36 0x30 0x37 0x3 0x2 0x52 0x30 0x32 0x33
0x34 0x3 0x2 0x43 0x44 0x52 0x39 0x36 0x31 0x30 0x58
0x58 0x58 0x20 0x3 0x2 0x42 0x36 0x31 0x30 0x30 0x30
0x32 0x37 0x30 0x35 0x3 0x2 0x53 0x47 0x42 0x30 0x30
0x31 0x34 0x30 0x30 0x36 0x3 0x2 0x4D 0x47 0x42 0x54
0x34 0x34 0x30 0x30 0x2D 0x42 0x4B 0x4B 0x31 0x30 0x2D
0x43 0x31 0x39 0x38 0x3 0x2 0x6D 0x3 0x2 0x49 0x34 0x35
0x3 0x4

# Stats command
# bytes received[65] 0x15 0x50 0x1 0x8 0x0 0x1 0x2 0x4C
0x34 0x32 0x3 0x2 0x43 0x3 0x2 0x50 0x35 0x37 0x35 0x3
0x4 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0
0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0
0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0
0x0 0x0 0x0

# Health command
# bytes received[65] 0x7 0x50 0x1 0x8 0x0 0x1 0x4 0x0
0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0
0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0
0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0
0x0

#
```



Below is the same data, displayed differently.

```
# Parsed data
#
Vendor = GBT4400
# UPOS
ManufacturerName = Datalogic ADC INC
DeviceCategory = Scanner
ScaleMode = English
```

```
# info
ApplicationROM = 610002607
ApplicationRevisionLevel = 0234
ConfigurationFileID = DR9610XXX
BootloaderROMID = 610002705
SerialNumber = GB0014006
TopModelNumber = GBT4400-BKK10-C198
MainBoardNumber =
Interface = USB-OEM
# health
# statistics
ScanCount = 42
LastScaleCalibrationTime =
PowerOnHours = 575
# Creation date: Wed Sep 05 16:41:45 2012
# Copyright 2012, Datalogic ADC, Inc.
# EOF
```

```
# Raw data from scanner/scale
```

```
# Info command
```



```
# bytes received[120] 0x1 0x2 0x41 0x36 0x31 0x30 0x30
0x30 0x31 0x30 0x31 0x30 0x3 0x2 0x52 0x30 0x30 0x39
0x30 0x3 0x2 0x43 0x3 0x2 0x42 0x36 0x31 0x30 0x30 0x30
0x31 0x31 0x30 0x35 0x3 0x2 0x53 0x53 0x46 0x30 0x30
0x30 0x33 0x39 0x34 0x38 0x32 0x32 0x3 0x2 0x4d 0x35
0x30 0x2d 0x30 0x30 0x31 0x36 0x2d 0x0 0x30 0x34 0x3 0x2
0x6d 0x3 0x2 0x49 0x34 0x35 0x3 0x4 0x0 0x0 0x0 0x0 0x0
0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0
0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0
0x61
```

```
# Health command
```

```
# bytes received[60] 0x1 0x2 0x63 0x4f 0x4b 0x3 0x4 0x0
0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0
0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0
0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x61
```

```
# Stats command
```

```
# bytes received[60] 0x1 0x2 0x50 0x39 0x34 0x3 0x2 0x4c
0x32 0x30 0x3 0x2 0x43 0x41 0x50 0x3f 0x3f 0x3f 0x3f
0x3f 0x3f 0x3f 0x3f 0x3f 0x3f 0x3f 0x3f 0x3f 0x3f 0x3f
0x3f 0x3f 0x3f 0x3f 0x3f 0x3f 0x3f 0x3 0x4 0x0 0x0 0x0
0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0
0x0 0x0 0x0 0x61
#
vendor = GD4400
# UPOS
ManufacturerName = Datalogic ADC INC
DeviceCategory = Scanner
Interface = USB
# Info
ModelNumber = GD4400-0016-04
SerialNumber = SF000394822
FirmwareVersionNumber = 610001010
ScannerRevisionNumber = 0090
ScannerBootROMID = 610001105
ScannerInterface = 45
# Health
CameraHealth = OK
# Stats
ScannerTime = 94
GoodScanCount = 20
LastScaleCalibrationTime = AP????????????????????????
#
# JavaPOS
# UnifiedPOSVersion = 1.13
# ControlVersion = 113000
# ServiceVersion = 1.13.42
#
# Creation date: Aug 14, 2012 2:22:01 PM
# Copyright 2012, Datalogic ADC, Inc.
# EOF
```

DLSJavaPOS Properties

The following are the contents of the properties file, `dls.properties`, and property descriptions.

Property: `com.dls.jpos.service.ScannerService.convertBCDtoASCII`

Default Value: `true`

Description: When true the data from the scanner is converted to ASCII for numbers 0 thru 9

Property: `com.dls.jpos.interpretation.autoLoadConfig`

Default Value: `true`

Description: When true the configuration items available to the OEM USB interface are read from the JavaPOS registry and sent to the attached scanner.

Property: `com.dls.jpos.service.ScaleService.ThrowExceptionOnScaleMotion`

Default Value: `false`

Description: Exception thrown when scale is in motion

Property: `com.dls.jpos.common.ScannerService.AvalancheEnabled`

Default Value: `true`

Description: When true the `.prf` file is created for use with Avalanche

Property: `com.dls.jpos.common.ScannerService.generateStatsOnEveryClaim`

Default Value: `true`

Description: When true every time the Claim method is called the `i`, `h`, `s` commands are sent to the attached device and responses are parsed and the internal WMI, MBeans data is populated. If false then the WMI and MBeans data is populated on the first Claim.

Property: `com.dls.jpos.common.ScannerService.ScannerInfoFilename`

Default Value: `scanner_info.txt`

Description: used as the suffix to the information file. The device class is prefixed to this name. Example `RS232Scanner_scanner_info.txt`

Property: com.dls.jpos.service.ScannerService.sendCookedData

Default Value: false

Description: When true the data that is in the scanDataLabel property is copied into the scanData property

Property: com.dls.jpos.common.LogManager.MaxFileSizeInMegabytes

Default Value: 10

Property: com.dls.jpos.common.LogManager.LogFilesToKeep

Default Value: 5

Property: com.dls.jpos.common.LogManager.TraceLevel

Default Value: 4

Property: com.dls.jpos.common.LogManager.TraceSourceName

Default Value: true

Description: When true the module name is prepended to messages written to the log file

Property: com.dls.jpos.common.LogManager.NumberOfWritesBeforeFlush

Default Value: 1

Property: com.dls.jpos.common.LogManager.UpdatePercentage

Default Value: 5

Description: Used as a percentage event

Property: com.dls.jpos.common.LogManager.TrimSourceName

Default Value: true

Property: com.dls.jpos.common.LogManager.LogFile

Default Value: jpostrace.log

JavaPOS Registry

The contents of the `jpos.xml` file are used to make decisions on how JavaPOS behaves when the Datalogic devices are attached. The following is a listing of the Datalogic-specific custom properties along with a brief description.

Property: `useVirtualPort`

Default Value: `False`

Description: When true under Windows causes the USB COM ports to be searched first before using the `portName` in the `jpos.xml` file

Property: `deviceClass`

Default Value: `RS232Scanner`

Description: Used to uniquely identify the scanner info file name and Avallanche `prf` file name.

Property: `useCOMxOnLinux`

Default Value: `False`

Description: When true JavaPOS will search for ports with the prefix of COM under the Linux operating system. Example:
COM1 under Linux is `/dev/COM1`

Property: `ipPort`

Default Value: `26666`

Description: Port number used to communicate with the PortalScanner

Property: `ipAddress`

Default Value: `192.168.0.2`

Description: Address number used to communicate with the PortalScanner

Property: `laneNumber`

Default Value: `0`

Description: lane number used to identify location of PortalScanner

Property: `imageBuffers`

Default Value: `1`

Description: number of buffers the connected application maintains

Property: serviceVersion

Default Value: 1.13.43 (current service version number)

Description: used for messages to and from PortalScanner

Property: MBeansEnabled

Default Value: False

Description: Enables the MBeans interface. Must be used with the java virtual machine command line option `-Dcom.sun.management.jmxremote`

Property: WMIEnabled

Default Value: False

Description: Enables WMI data store population

Property: decodeType

Default Value: standard

Description: Used to determine the label ID sent from the attached scanner. Three types may exist, standard, Warhol/European, or AIM.

NOTES


Appendix B.

Auto Installation Script


Creation and use of auto-installation script

This section describes how to create an auto-installation script for use in unattended installs. The example below uses the standard Windows install directories.


Figure 10.After normal installation is finished

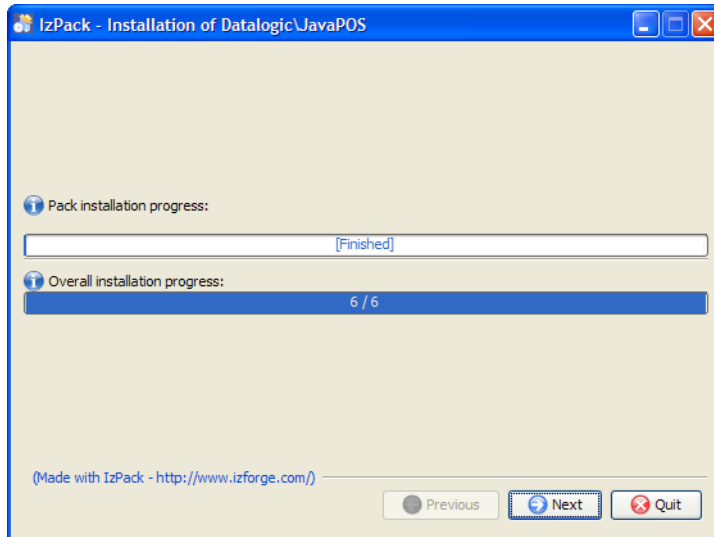


1. Click the "Generate an automatic installation script" button

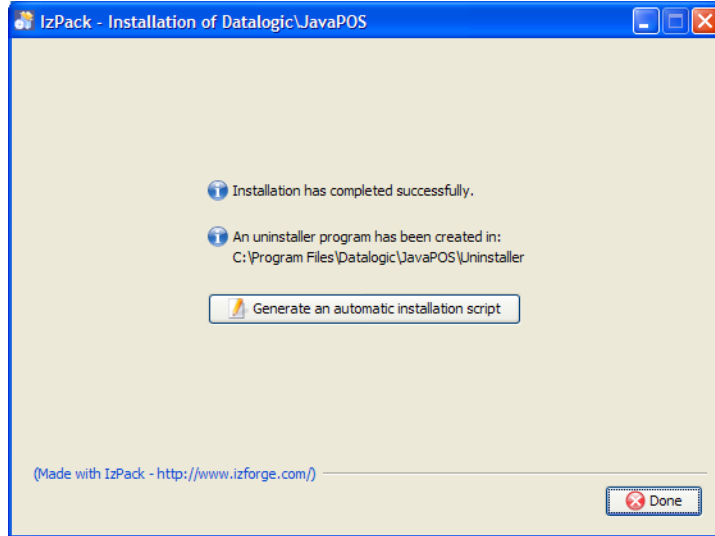


2. A "Save As" dialog pops up

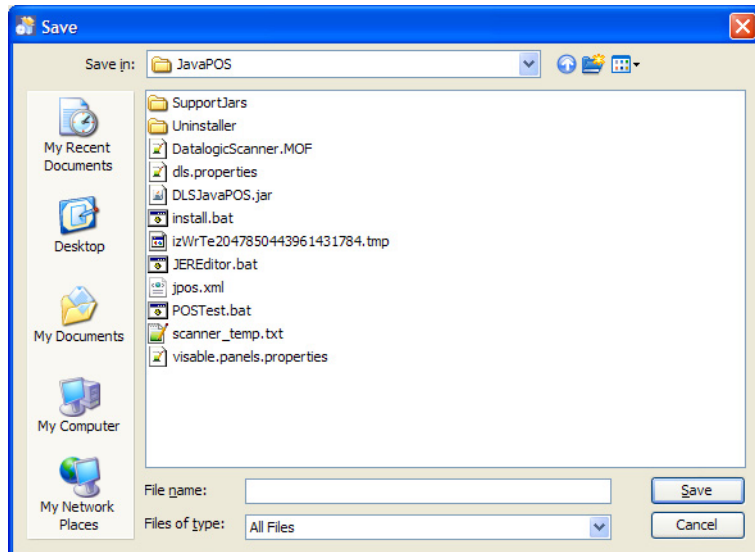


3. Enter "auto-install.xml" as the file name

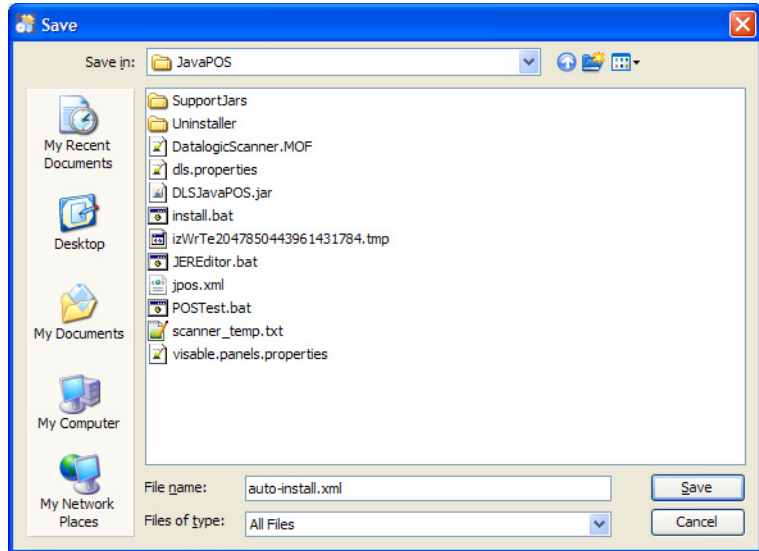

4. Now the file has been created

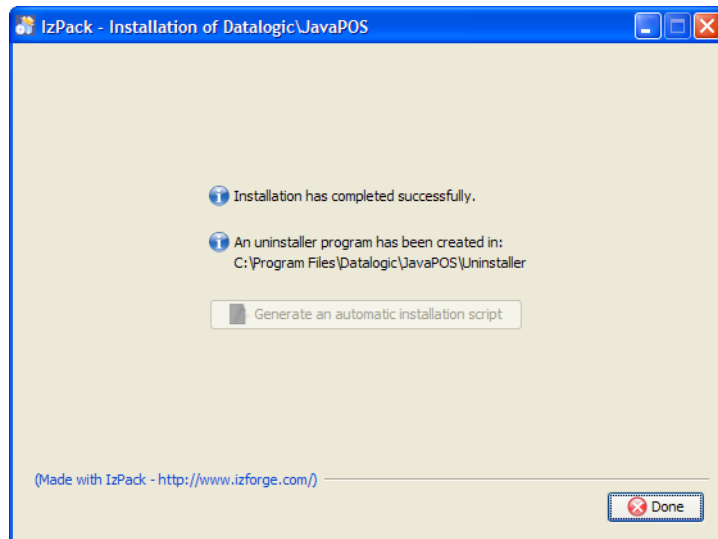

5. The "auto-install.xml" file is now located in the installation directory

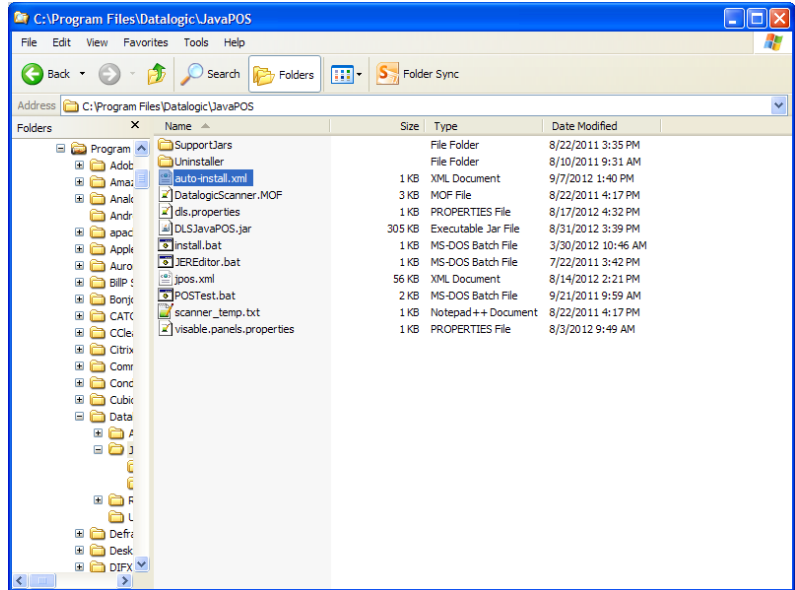

Use this file along with the `install.bat` and `setup.jar` to perform command line installation, as the contents of the `install.bat` imply.

Contents of `install.bat`

```
@echo off
java -jar setup.jar auto-install.xml
```

Contents of `auto-install.xml` file

```
<AutomatedInstallation langpack="eng">
  <com.izforge.izpack.panels.DLSHelloPanel/>
  <com.izforge.izpack.panels.LicencePanel/>
  <com.izforge.izpack.panels.TargetPanel>
    <installpath>C:\Program
Files\Datalogic\JavaPOS</installpath>
  </com.izforge.izpack.panels.TargetPanel>
  <com.izforge.izpack.panels.PacksPanel>
```



```
<selected>
  <pack index="0" />
  <pack index="1" />
  <pack index="2" />
  <pack index="3" />
  <pack index="4" />
  <pack index="5" />
</selected>
</com.izforge.izpack.panels.PacksPanel>
<com.izforge.izpack.panels.InstallPanel/>
<com.izforge.izpack.panels.FinishPanel/>
</AutomatedInstallation>
```

NOTES



www.datalogic.com

Datalogic ADC, Inc.

959 Terry Street

Eugene, OR 97402

USA

Telephone: (541) 683-5700

Fax: (541) 345-7140

